

SENSOR ALLY APP - QUICK START GUIDE



Follow these instructions to wirelessly update your Lezyne Heart Rate Flow Sensor to the latest firmware version

Download the Sensor Ally app:




STEP 1

Open the app


Ensure Bluetooth is enabled on your smartphone

STEP 3

Tap "Update"

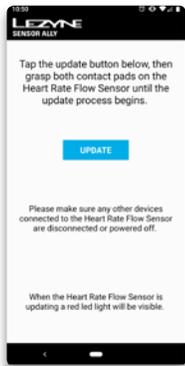

Android

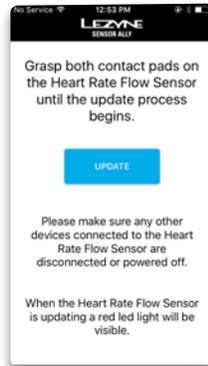


iPhone

STEP 5


Wait for the update to complete

iOS: A red light on the sensor body will flash once when the update is complete

Android: A red light on the sensor body will turn off when the update is complete

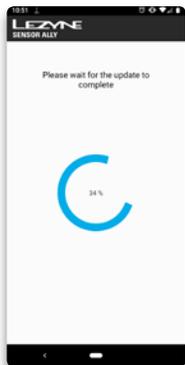

Android

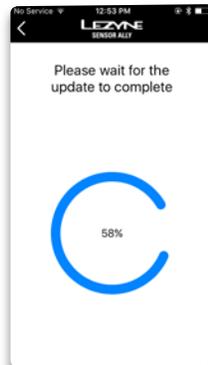

iPhone

STEP 2

Attach the sensor body to the strap.



STEP 4


Touch both contact pads on the strap to activate the sensor. The sensor will automatically connect to your smartphone when activated.

iOS: A red light on the sensor body will flash once when the update begins


Android: A red light on the sensor body will remain on throughout the update

STEP 6

Your Heart Rate Flow Sensor is up to date!

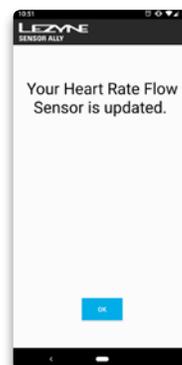

Android

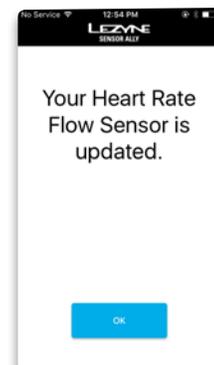

iPhone